




# Powerstroke 6.7L 2011-2023 Exhaust Installation

## General Installation Guide

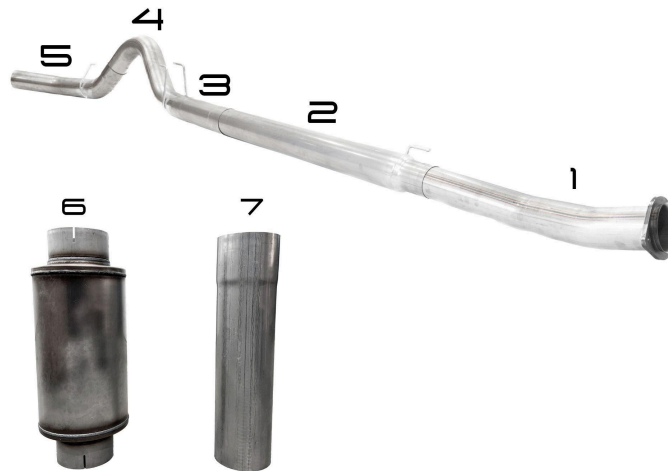

### Installation

Start with pipes 1 & 2, and then 5 & 4. Once those pipes are in, your mid section/muffler (6 & 7) can be installed and completed. Pipe 7 is a long box extension pipe.

**Note**

Depending on box/cab configurations one cut may need to be made as these kits are designed around crew cab long box trucks.

2023-2024 Trucks require LC3Z-6N646-C downpipe or PD-1-13236000  
(coming soon)